AKL 828 PRODUCT DESCRIPTION SHEET

GB IE

OVEN

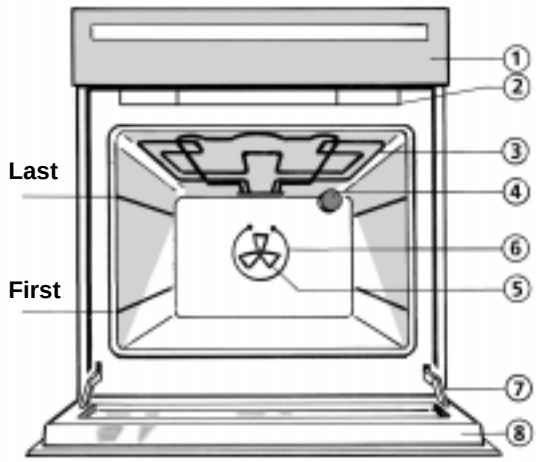

First...Last: Runner positions

1. Control panel
2. Cooling fan (not visible)
3. Grill element
4. Oven light
5. Fan
6. Round heating element
7. Oven door hinges
8. Oven door

Accessories:

- Grid
- Pan set kit

CONTROL PANEL

1. Oven thermostat knob
2. Oven functions selector knob
3. Thermostat indicator light

Important: An optional kit consisting of an oven door glass and of relevant mounting components, is available by the After-Sales Service. The use of the kit reduces the temperature of the outer oven surface and is strongly recommended if there are kids in the house.
Code N°: 4819 310 39186.

OVEN FUNCTIONS

0 Off

Oven light

FAN FUNCTION

Use this function when cooking food on more than one level (e.g.: fish, vegetables, pasta).

- Choose foods that require the same cooking temperature.
- Oven preheating is not necessary.
- Remove the cooked dish and, if necessary, continue cooking the other one for as long as required.

GRILL FUNCTION

Use the grill function to cook small pieces of meat (steaks, sausages) and for making toasts.

- The oven door must be open during the cooking cycle.
- Preheat the grill for about 5 minutes.
- Arrange the meat on the grid with the drip tray underneath. Pour water in the drip tray to cover the bottom to reduce smoke and fat spatters.
- Turn over the meat about half-way through cooking time.

DEFROST FUNCTION

Ideal for thawing frozen food to room temperature. The food should be inserted in the oven in its wrapping to prevent it from drying out.

SWITCHING THE OVEN ON

Turn the selector knob to the required symbol.

The oven light switches on.

- Turn the thermostat knob clockwise to the required temperature.

The red thermostat indicator light switches on.

- When the required temperature is reached, the red thermostat indicator light switches off.

End of cooking cycle:

Return the knobs to the OFF position (0 - •).